

Honeycomb Viewer Operator's Manual

Table of Contents

Section 1: Installation	1
Section 2: Honeycomb Viewer Main Page	2
Section 3: Print	4
Section 4: HoneycombViewer.ini	5

Section 1

Installation


Honeycomb Viewer Installation

Honeycomb Viewer requires the installation of the DVT SID ActiveX control. To install, click on the file named DVT SID ActiveX.exe and follow the instructions.

To install the Honeycomb Viewer software, create a directory on the C: drive named C:\Honeycomb Viewer and copy the file named HoneycombViewer.exe to that directory.

To run Honeycomb Viewer, click Run on the Windows Start Menu and select C:\Honeycomb Viewer\HoneycombViewer.exe, double click C:\Honeycomb Viewer\HoneycombViewer.exe from within Windows Explorer, or create and use a shortcut on the Windows desktop.

Section 2 Honeycomb Viewer Main Page

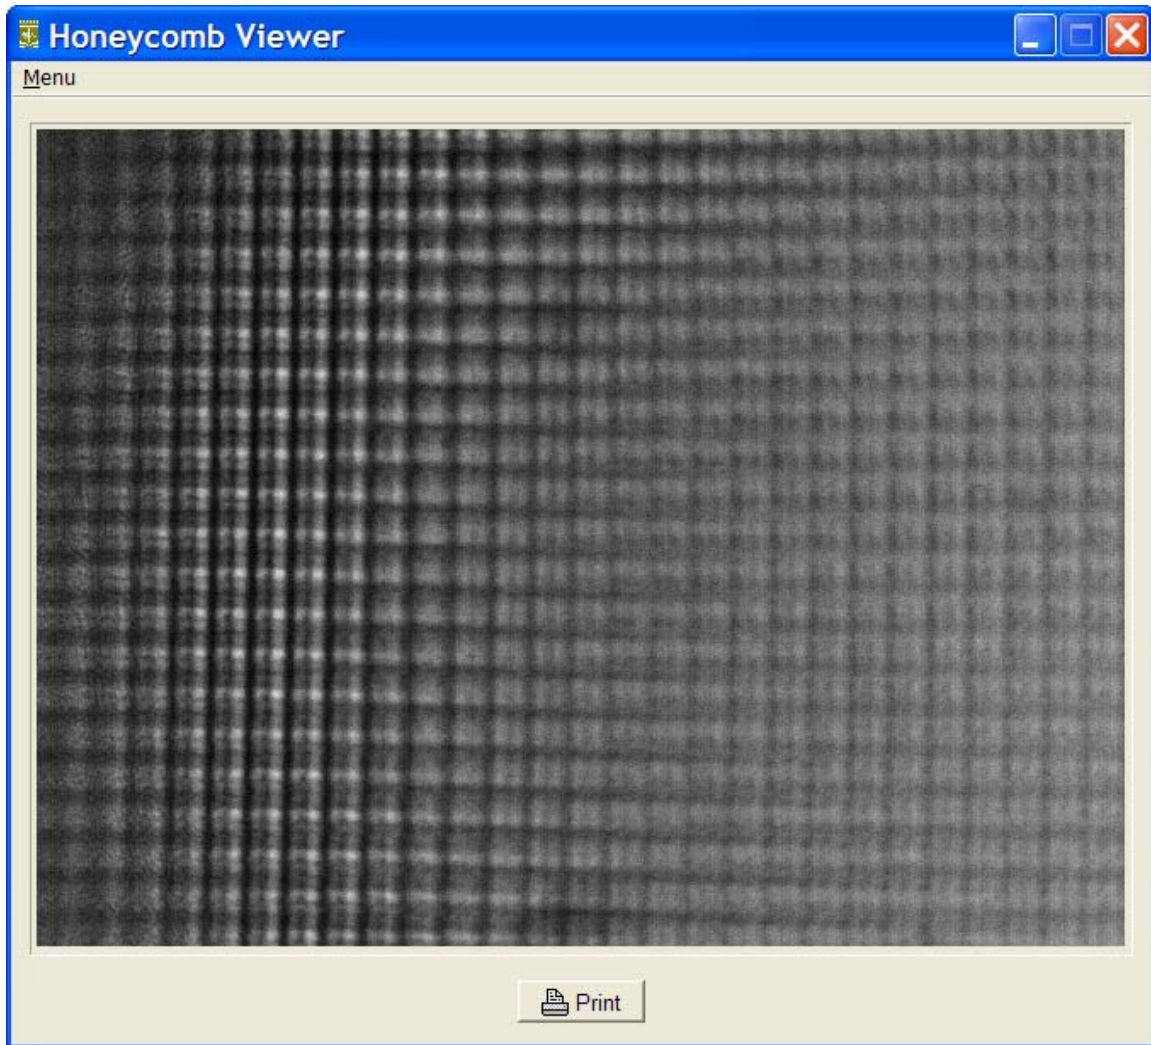

Images DVT camera images are displayed in a window on the Main Page.

Print Click Print to capture the current image and display the Print window.

Honeycomb Viewer Menu


To access the Honeycomb Viewer Menu, click Menu in the upper left hand corner of the Main Page.

Exit Click Exit to exit from Honeycomb Viewer.

About Click About to display the Honeycomb Viewer version information.

Section 3

Print

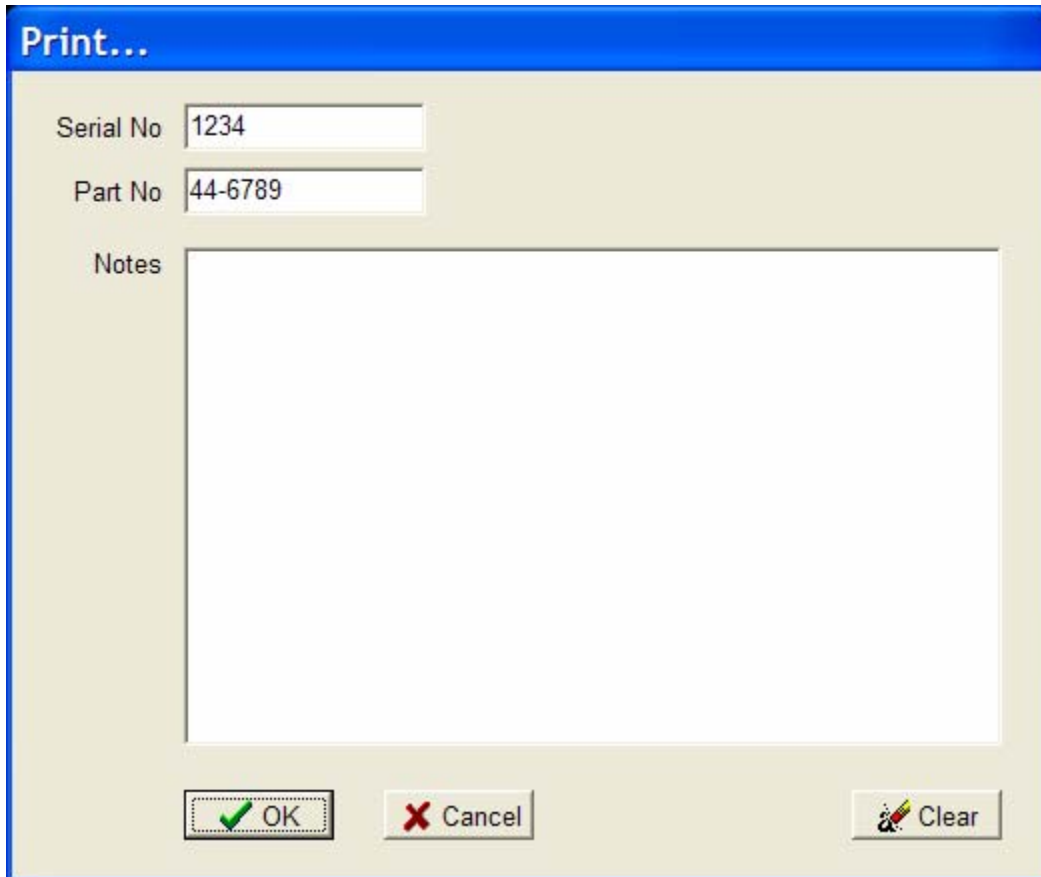

Print...

Serial No 1234

Part No 44-6789

Notes

OK Cancel Clear

Click Print on the Main Page to display the Print window.

Serial No Enter the serial number.

Part No Enter the part number.

Notes Enter any relevant notes to be printed.

OK Click OK to generate the printout.

Cancel Click Cancel to return to viewing images without printing.

Clear Click Clear to clear the Serial No, Part No, and Notes boxes.

Section 4

HoneycombViewer.ini

If the IP address of the camera changes for any reason, Honeycomb Viewer will need to know the new address. This can be done by using Microsoft Notepad to create or edit the file named HoneycombViewer.ini. The IP address is specified by the following entry.

```
[IpAddresses]  
Camera=192.168.1.242
```

Note: 192.168.1.242 should be replaced with the actual IP address.